

1. TECHNICAL SPECIFICATIONS

Power: AC240V(50Hz)

Rated Load: ≤600W


The receiver will cut the power after working for 4mins continuously

The receiver can be controlled by 15 remotes at most


The receiver's UP/STOP/DOWN buttons can also control the motor

The receiver has A & B channels. Each channel can control 1 motor


2. PRODUCT APPEARANCE

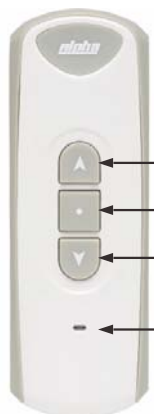

Remote RE101

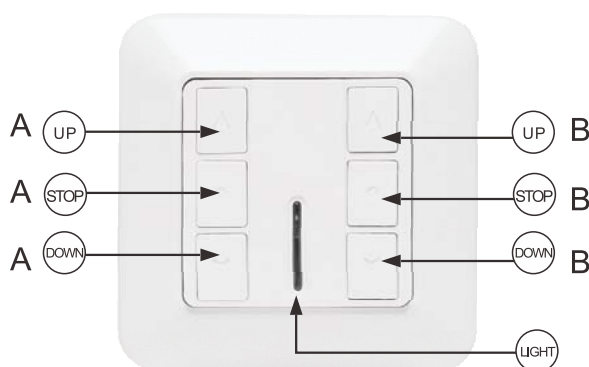


Receiver RC202

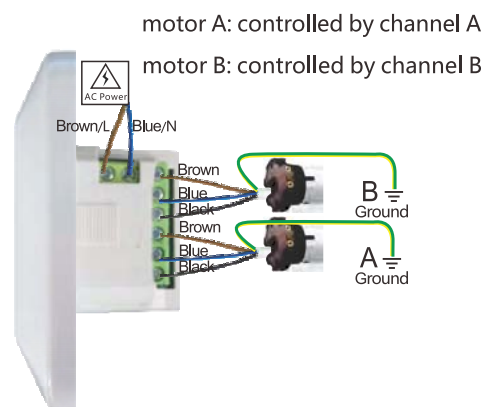


RC202 wires connection

3. CODE LEARNING


Note: We take channel B as an example to explain the receiver's operation. Channel A's operation is the same.

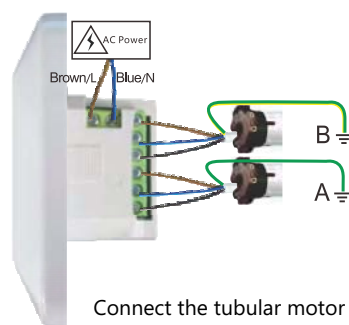


Connect the tubular motor and the receiver.

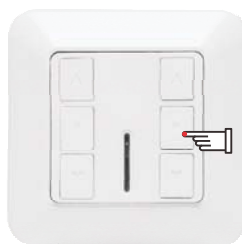

Long press the receiver's STOP button for 3s till the tubular motor vibrates.

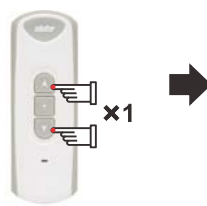


Press remote's UP and DOWN buttons simultaneously.

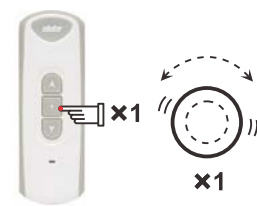


Press remote's STOP button once, the motor will vibrate.

4. COPY


Note: Remote B can control the tubular motor after it learns code from remote A.

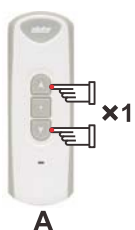


Press the UP and DOWN buttons of remote A simultaneously.

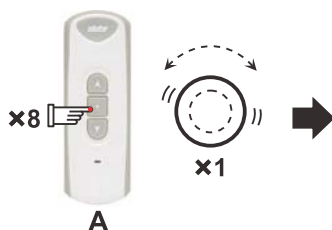

Press the STOP button of remote A eight times, the motor will vibrate.

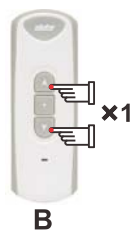

Press the UP and DOWN buttons of remote B simultaneously.

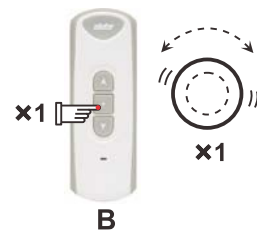


Press remote's STOP button of remote B once, the motor will vibrate again. Now remote B can control the motor as well.

5. CODE DELETING

Note: All the remotes will not control this motor, unless you cut off the power and do code learning again.

Way A

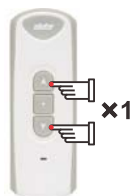

Press the UP and DOWN buttons simultaneously.



Press the STOP button of remote six times.




Press the UP button once, the motor vibrates once.



All the remotes that have already learned the motor's code won't control the motor any more.


Way B

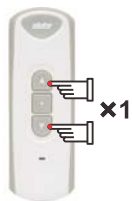

Press the UP and DOWN buttons simultaneously.



Press the STOP button of remote seven times.

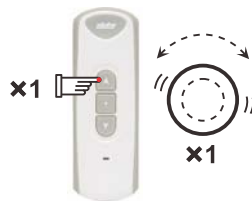


Press remote's UP button once, the motor vibrates once.



This remote you are operating now won't control the motor any more.


6. DIRECTION CHANGE

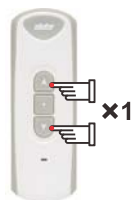

Press the UP and DOWN buttons simultaneously.



Press the STOP button of remote six times.

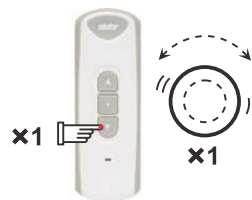


Press remote's DOWN button once, the motor vibrates once.




The motor's running direction is changed.


7. SET STEP BY STEP FUNCTION

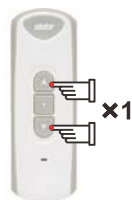


Press the UP and DOWN buttons simultaneously.

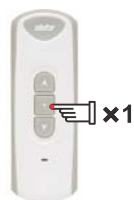

Press the STOP button of remote once.

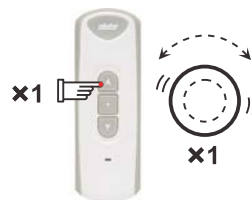


Press remote's UP button once, the motor vibrates once.

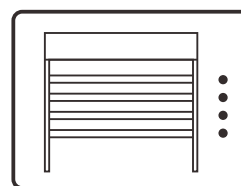

The motor will run step by step.

Note: If the motor runs step by step, long press remote's UP or DOWN button for 3 seconds, the motor will run continuously.


8. DELETE STEP BY STEP FUNCTION

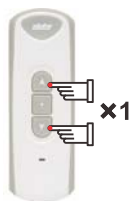


Press the UP and DOWN buttons simultaneously.



Press the STOP button of remote once.

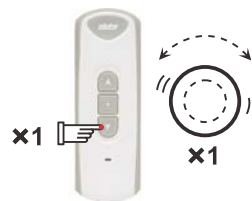

Press remote's DOWN button once, the motor vibrates once.

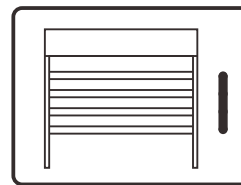

The motor will run continuously.

! Announcement

- Setting may fail due to the interference of signal. If this happens, please reset.
- The remote RE101 is taken as an example in this instruction. The receiver is compatible with several other rolling code remotes.
- Please do not press buttons for too long in case life span of battery declines. Pressing time should be at 0.5s with 1s interval. If the battery is in low power, please replace battery.
- The control unit is of high voltage. Please do not place it in humid atmosphere.
- Children should be supervised to ensure that they do not play with the appliance.
- Ambient temperature: -10 °C to +55 °C.
- Product's appearance, color, function etc is subject to change. This information is subject to change without notice.